


WPC 95 5.25" Backbox Speaker Mount Template

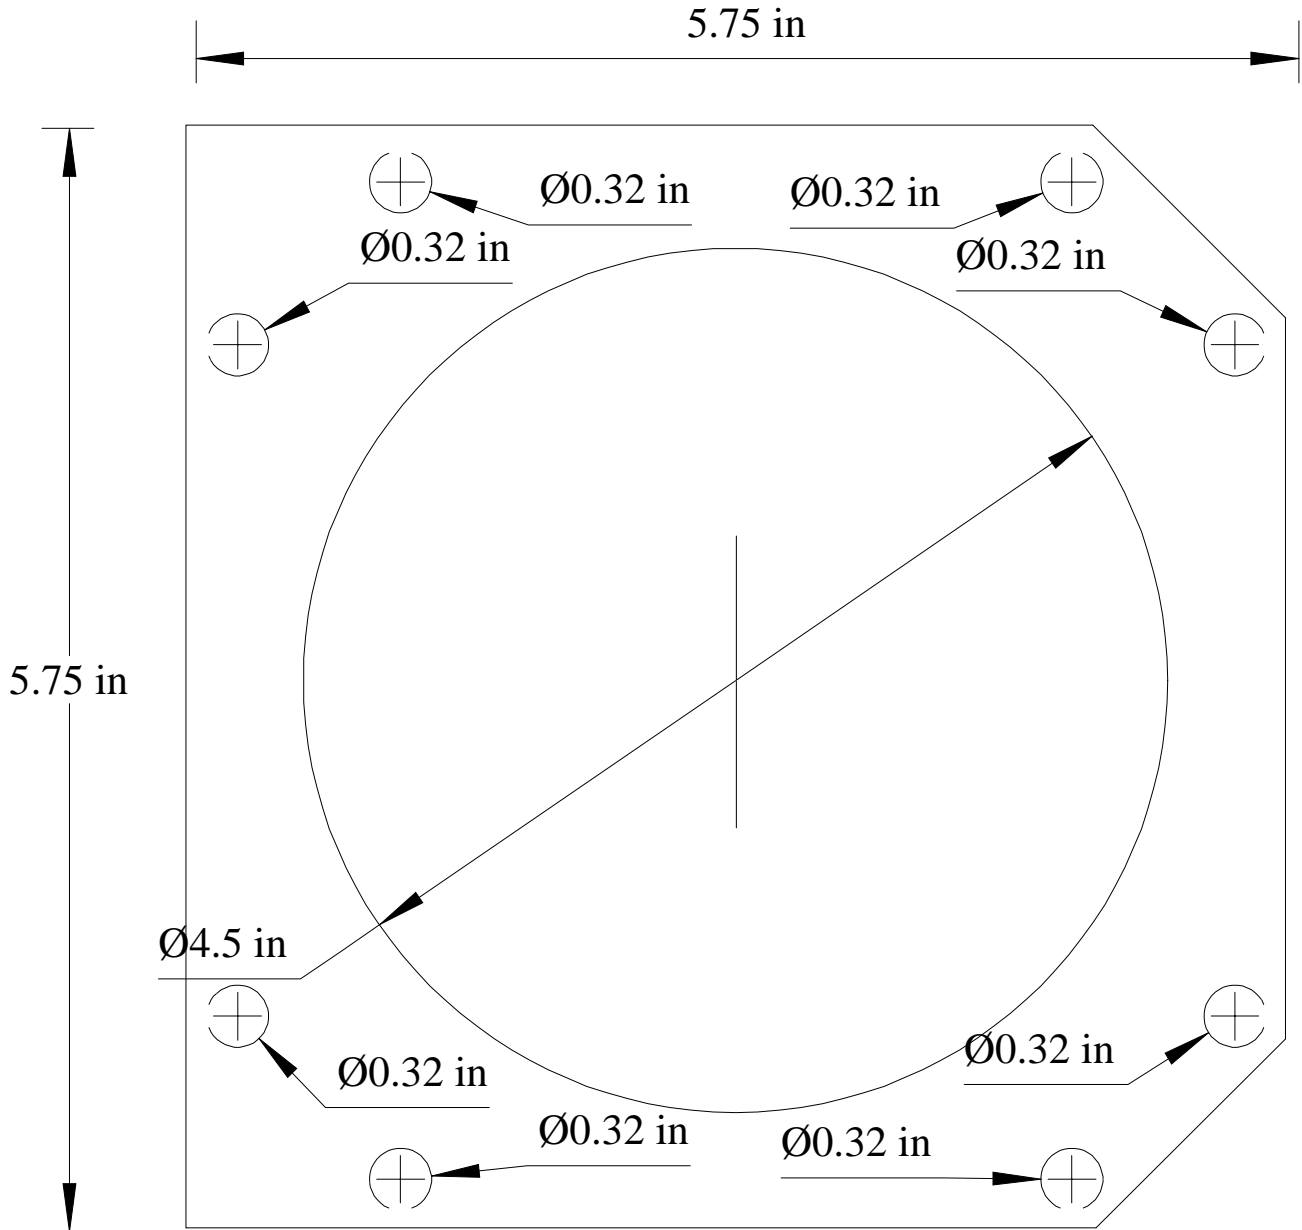

Material: 1/2" MDF or plywood

Use a 5/16 drill for the mounting holes

Use #6 5/8" self-tapping screws with a #10 washer to mount

The corner chamfer cut is to clear internal plastics: I have not checked for clearance yet, feedback requested!

Use auto speakers, and wire them in series. They will be loud!